



Rev.02-11-2020

PPP-3ACB-A

3 AMP CIRCUIT BREAKER AMERICAN CONTROL BOX

Remove power from pinsetter by unplugging power cord at top of control box. Cut both wires as close as possible to fuse holder assembly. Remove fuse holder assembly from control box and install new circuit breaker. Crimp new electrical terminals onto wires and push onto circuit breaker assembly. Restore power to pinsetter.



Rev.02-11-2020

PPP-3ACB-A

3 AMP CIRCUIT BREAKER AMERICAN CONTROL BOX

Remove power from pinsetter by unplugging power cord at top of control box. Cut both wires as close as possible to fuse holder assembly. Remove fuse holder assembly from control box and install new circuit breaker. Crimp new electrical terminals onto wires and push onto circuit breaker assembly. Restore power to pinsetter.



Rev.02-11-2020

PPP-3ACB-A

3 AMP CIRCUIT BREAKER AMERICAN CONTROL BOX

Remove power from pinsetter by unplugging power cord at top of control box. Cut both wires as close as possible to fuse holder assembly. Remove fuse holder assembly from control box and install new circuit breaker. Crimp new electrical terminals onto wires and push onto circuit breaker assembly. Restore power to pinsetter.



Rev.02-11-2020

PPP-3ACB-A

3 AMP CIRCUIT BREAKER AMERICAN CONTROL BOX

Remove power from pinsetter by unplugging power cord at top of control box. Cut both wires as close as possible to fuse holder assembly. Remove fuse holder assembly from control box and install new circuit breaker. Crimp new electrical terminals onto wires and push onto circuit breaker assembly. Restore power to pinsetter.



Rev.02-11-2020

PPP-3ACB-A

3 AMP CIRCUIT BREAKER AMERICAN CONTROL BOX

Remove power from pinsetter by unplugging power cord at top of control box. Cut both wires as close as possible to fuse holder assembly. Remove fuse holder assembly from control box and install new circuit breaker. Crimp new electrical terminals onto wires and push onto circuit breaker assembly. Restore power to pinsetter.



Rev.02-11-2020

PPP-3ACB-A

3 AMP CIRCUIT BREAKER AMERICAN CONTROL BOX

Remove power from pinsetter by unplugging power cord at top of control box. Cut both wires as close as possible to fuse holder assembly. Remove fuse holder assembly from control box and install new circuit breaker. Crimp new electrical terminals onto wires and push onto circuit breaker assembly. Restore power to pinsetter.