



Rev. 06-15-2020


Frameworkx Seating Pin Removal Tool

Part No. PPP-FXPRT

Before use, lubricate all threads with lightweight oil to extend service life.

Always use the included thru-hard washers to prevent galling of slotted holes.

Loosen seating pivot pin set screw before removal.

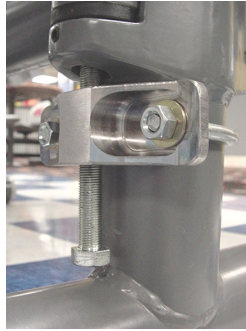

Rev. 06-15-2020

Frameworkx Seating Pin Removal Tool

Part No. PPP-FXPRT

Before use, lubricate all threads with lightweight oil to extend service life.

Always use the included thru-hard washers to prevent galling of slotted holes.

Loosen seating pivot pin set screw before removal.



Rev. 06-15-2020


Frameworkx Seating Pin Removal Tool

Part No. PPP-FXPRT

Before use, lubricate all threads with lightweight oil to extend service life.

Always use the included thru-hard washers to prevent galling of slotted holes.

Loosen seating pivot pin set screw before removal.

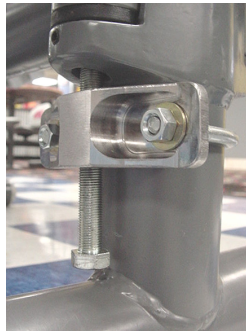

Rev. 06-15-2020

Frameworkx Seating Pin Removal Tool

Part No. PPP-FXPRT

Before use, lubricate all threads with lightweight oil to extend service life.

Always use the included thru-hard washers to prevent galling of slotted holes.

Loosen seating pivot pin set screw before removal.



Rev. 06-15-2020


Frameworkx Seating Pin Removal Tool

Part No. PPP-FXPRT

Before use, lubricate all threads with lightweight oil to extend service life.

Always use the included thru-hard washers to prevent galling of slotted holes.

Loosen seating pivot pin set screw before removal.

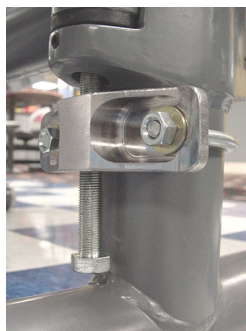

Rev. 016-15-2020

Frameworkx Seating Pin Removal Tool

Part No. PPP-FXPRT

Before use, lubricate all threads with lightweight oil to extend service life.

Always use the included thru-hard washers to prevent galling of slotted holes.

Loosen seating pivot pin set screw before removal.

