

Rev. 03-12-2020 PPP-PG2

"Pozi-Grip"TM Ball Wheel Strips w/ "Pozi-Guard"TM

(Patent Pending)

Installation Instructions

Clean 16-in. area of ball wheel. Use cleaners that leave no soap residue.

It is recommended to lightly scuff cleaned area of ball wheel to improve adhesive quality of this product. Do not use adhesive removal products on ball wheel. Remove Backing and install "Pozi-Grip" to cleaned area of ball wheel. Remove Backing and install "Pozi-Guard" in front of "Pozi-Grip" per above diagram. Do not clean "Pozi-Grip" with power applied to pinsetter. Pinsetter should be powered down to prevent injury and premature wear to product.



│ Rev. 03-12-2020 PPP-PG2 "Pozi-Grip"[™] Ball Wheel Strips w/ "Pozi-Guard"[™]

(Patent Pending)

Installation Instructions

Clean 16-in. area of ball wheel. Use cleaners that leave no soap residue.

It is recommended to lightly scuff cleaned area of ball wheel to improve adhesive quality of this product. Do not use adhesive removal products on ball wheel. Remove Backing and install "Pozi-Grip"TM to cleaned area of ball wheel. Remove Backing and install "Pozi-Guard"TM in front of "Pozi-Grip"TM per above diagram. Do not clean "Pozi-Grip"TM with power applied to pinsetter. Pinsetter should be powered down to prevent injury and premature wear to product.



Rev. 03-12-2020 PPP-PG2 "Pozi-Grip"TM Ball Wheel Strips w/ "Pozi-Guard"TM

(Patent Pending)

Installation Instructions

Clean 16-in. area of ball wheel. Use cleaners that leave no soap residue.

It is recommended to lightly scuff cleaned area of ball wheel to improve adhesive quality of this product. Do not use adhesive removal products on ball wheel. Remove Backing and install "Pozi-Grip"TM to cleaned area of ball wheel. Remove Backing and install "Pozi-Guard"TM in front of "Pozi-Grip"TM per above diagram. Do not clean "Pozi-Grip"TM with power applied to pinsetter. Pinsetter should be powered down to prevent injury and premature wear to product.