 




Installation Instructions

PART NUMBER	157-8821	
PART DESCRIPTION	TRIGGER SWITCH PLATE	
REV DATE	11/21/2018	
MACHINE MODELS	TORCH X	

TOOLS NEEDED	PARTS
Drill 1/8" Drill Bit	

TECHNICAL NOTE

Please thoroughly read the instructions prior to performing the installation of this assembly. To avoid any potential problems, if at any time during the process you have a question, stop and contact our Tech Support department at the numbers listed below.

STEPS

These instructions will allow you to gain more adjustment on the trigger switch for those with taller gutter capping.

1. First, remove the light switch from the plate on the assembly.
2. On the bottom light assembly, lift up on the white cover enough to view the inside of the bar assembly.



Within USA - 1-800-280-2695
Outside USA - +1 863-734-0200
www.kegel.net
E-Mail: tech@kegel.net

Rev. 9/20



3. Remove the existing switch plate assembly that is riveted to the bar. Do this by laying the light bar on its side, and drilling out the rivets using a 1/8" drill bit. BE CAREFUL NOT TO MAKE CONTACT WITH THE LIGHT STRIP INSIDE. (laying it on its side will prevent any shavings falling into the light strip).
4. Use an air compressor to blow out any metal shavings that have fallen
5. Using the supplied hardware, reattach the switch plate assembly and adjust the height accordingly.

Switch Height Adjustment:

1. The switch can be adjusted to change difficulty or customize for your height of capping. Loosen the screw and adjust the height to be lower for easier or higher for harder.

