

INSTALLATION INSTRUCTIONS

PART NUMBER	158-8671
PART DESCRIPTION	TOUCHSCREEN REPLACEMENT
REV DATE	4/15/2020
MACHINE MODELS	ION / WALKER SPORT MODEL LANE MACHINES



Basic knowledge of the operation of the lane machine

TOOLS NEEDED:

Phillips Screwdriver

3/8" wrench



TECHNICAL NOTE

Please thoroughly read the instructions prior to performing the installation of this assembly.

To avoid any potential problems, if at any time during the process you have a question, stop and contact our Tech Support department at the numbers listed below.

Please visit our growing library of videos to see if these instructions are available!



www.youtube.com/user/KegelBowling81

KEGEL TECH SUPPORT: Within USA - 1-800-280-2695 Outside USA - +1 863-734-0200 via e-mail at LMC@Kegel.net website www.kegel.net



- 1. Lay the machine down in the operating position.
- 2. Make sure E-Stop is in the off position before starting.
- 3. Remove the (4) screws that secure the touchscreen mounting bracket to the rear and right-side frame panels. These will be used for reassembly.
- 4. Unplug the existing touchscreen from the harness wiring.
- 5. Remove the (2) flathead screws that mount the touch screen guard to the mounting bracket. These will be used for reassembly.
- 6. Loosen and remove the (4) mounting feet. These are the tabs that secure the touchscreen to the mounting bracket.
- 7. Remove the defective touchscreen and replace with the new. Replace the (4) mounting feet and tabs and tighten.
- 8. Re-install the touchscreen guard using the (2) flathead screws removed in step #5.
- 9. Plug the new touchscreen into the harness wiring.
- 10. Re-install the touchscreen mounting bracket to the rear and right-side panels using the (4) screws removed in step #3.
- 11. Power the machine up and make sure the touchscreen operates properly.