



INSTALLATION INSTRUCTIONS

PART NUMBER	163-1202A
PART DESCRIPTION	LIGHT TRIGGER SWITCH FOR TORCH X
REV DATE	4/15/2020
MACHINE MODELS	TORCH X



Basic knowledge of the operation of the lane machine

TOOLS NEEDED:
Phillips Screwdriver
11/32 wrench



TECHNICAL NOTE

Please thoroughly read the instructions prior to performing the installation of this assembly.

To avoid any potential problems, if at any time during the process you have a question, stop and contact our Tech Support department at the numbers listed below.

Please visit our growing library of videos to see if these instructions are available!



www.youtube.com/user/KegelBowling81

KEGEL TECH SUPPORT:
Within USA - 1-800-280-2695
Outside USA - +1 863-734-0200
via e-mail at LMC@Kegel.net
website www.kegel.net



Installation of Light Switch

1. Remove the switch assembly from the bracket.
2. Open the top of the switch by removing the black cover with a small screwdriver as shown in the pic.
3. The white or yellow wire (pending on original equipment or upgraded Torch X) will go on the middle NC (Normally Closed) position. The other wire will go to the C (Common) position.
4. Fasten into place and snap the black cap back onto the switch along with the rubber boot
5. Fasten back onto the plate assembly and adjust to the correct height.

