



Rev.02-11-2020

PPP-DCLR

DASHPOT CHAIN LINK REPLACEMENT

Refer to page 29 of Brunswick Service Parts Manual. This shaft replaces GB-352 Plunger Shaft and eliminates GB-349 Connecting Link and GB-350 Stop Collar. After installation you must perform Dashpot Adjustment.



Rev.02-11-2020

PPP-DCLR

DASHPOT CHAIN LINK REPLACEMENT

Refer to page 29 of Brunswick Service Parts Manual. This shaft replaces GB-352 Plunger Shaft and eliminates GB-349 Connecting Link and GB-350 Stop Collar. After installation you must perform Dashpot Adjustment.



Rev.02-11-2020

PPP-DCLR

DASHPOT CHAIN LINK REPLACEMENT

Refer to page 29 of Brunswick Service Parts Manual. This shaft replaces GB-352 Plunger Shaft and eliminates GB-349 Connecting Link and GB-350 Stop Collar. After installation you must perform Dashpot Adjustment.



Rev.02-11-2020

PPP-DCLR

DASHPOT CHAIN LINK REPLACEMENT

Refer to page 29 of Brunswick Service Parts Manual. This shaft replaces GB-352 Plunger Shaft and eliminates GB-349 Connecting Link and GB-350 Stop Collar. After installation you must perform Dashpot Adjustment.



Rev.02-11-2020

PPP-DCLR

DASHPOT CHAIN LINK REPLACEMENT

Refer to page 29 of Brunswick Service Parts Manual. This shaft replaces GB-352 Plunger Shaft and eliminates GB-349 Connecting Link and GB-350 Stop Collar. After installation you must perform Dashpot Adjustment.



Rev.02-11-2020

PPP-DCLR

DASHPOT CHAIN LINK REPLACEMENT

Refer to page 29 of Brunswick Service Parts Manual. This shaft replaces GB-352 Plunger Shaft and eliminates GB-349 Connecting Link and GB-350 Stop Collar. After installation you must perform Dashpot Adjustment.



Rev.02-11-2020

PPP-DCLR

DASHPOT CHAIN LINK REPLACEMENT

Refer to page 29 of Brunswick Service Parts Manual. This shaft replaces GB-352 Plunger Shaft and eliminates GB-349 Connecting Link and GB-350 Stop Collar. After installation you must perform Dashpot Adjustment.



Rev.02-11-2020

PPP-DCLR

DASHPOT CHAIN LINK REPLACEMENT

Refer to page 29 of Brunswick Service Parts Manual. This shaft replaces GB-352 Plunger Shaft and eliminates GB-349 Connecting Link and GB-350 Stop Collar. After installation you must perform Dashpot Adjustment.