

INSTALLATION INSTRUCTIONS

PART NUMBER	164-8027
PART DESCRIPTION	CLEANER PUMP ASSY CONCENTRATE
REV DATE	4/14/2020
MACHINE MODELS	FLEX & FLEX WALKER



Basic knowledge of the operation of the lane machine

Tools Needed: Phillip Screwdriver

7/16" Wrench

3/4 wrench (2)

PARTS INLCUDED: LED Light Assembly



TECHNICAL NOTE

Please thoroughly read the instructions prior to performing the installation of this assembly.

To avoid any potential problems, if at any time during the process you have a question, stop and contact our Tech Support department at the numbers listed below.

Please visit our growing library of videos to see if these instructions are available! You Tube www.youtube.com/user/KegelBowling81 KEGEL TECH SUPPORT: Within USA - 1-800-280-2695 Outside USA - +1 863-734-0200 via e-mail at <u>LMC@Kegel.net</u> website www.kegel.net




Removal of Cleaner Pump assembly

1. With the machine setting down in the operating position, remove the screws that fasten the 7-pin side cover to the machine. You will have one in the oil compartment and one in the cleaning compartment as shown below.



Oil Compartment 7-pin side

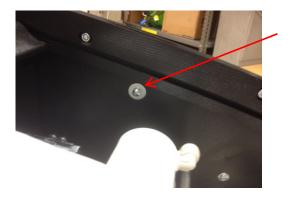

Cleaner Compartment 7-pin side

- 2. With the lane machine standing in the upright position, remove the three screws that hold the side cover to the machine and set the cover aside.
- 3. Unplug the connector for the motor.
- 4. Open the aluminum pivot arm clamp and lift the hose up and away from the pump assembly.
- 5. Remove the four mounting screws that hold the motor to the mounting bracket and slide the motor out.
- 6. Take the new motor and slide into the exact place that the old one was removed and fasten into place.
- 7. Place the hose back into place and clamp down.
- 8. Perform a few cleaner calibrations to ensure the pump is working properly.
- 9. Replace cover.
- 10. Return defective cleaner pump for warranty if applicable.