



## PPP-BCSHR

**BELLCRANK STUD HOLE REPAIR**  
Place small diameter washer onto Bell crank stud. Insert bell crank into turret frame and place large washer onto stud and secure with lock nut  
Rev.02-12-2020



## PPP-BCSHR

**BELLCRANK STUD HOLE REPAIR**  
Place small diameter washer onto bell crank stud. Insert bell crank into turret frame and place large washer onto stud and secure with lock nut.  
Rev.02-12-2020



## PPP-BCSHR

**BELLCRANK STUD HOLE REPAIR**  
Place small diameter washer onto Bell crank stud. Insert bell crank into turret frame and place large washer onto stud and secure with lock nut  
Rev.02-12-2020



## PPP-BCSHR

**BELLCRANK STUD HOLE REPAIR**  
Place small diameter washer onto bell crank stud. Insert bell crank into turret frame and place large washer onto stud and secure with lock nut.  
Rev.02-12-2020



## PPP-BCSHR

**BELLCRANK STUD HOLE REPAIR**  
Place small diameter washer onto Bell crank stud. Insert bell crank into turret frame and place large washer onto stud and secure with lock nut  
Rev.02-12-2020



## PPP-BCSHR

**BELLCRANK STUD HOLE REPAIR**  
Place small diameter washer onto bell crank stud. Insert bell crank into turret frame and place large washer onto stud and secure with lock nut.  
Rev.02-12-2020