



INSTALLATION INSTRUCTIONS

PART NUMBER	154-8285
PART DESCRIPTION	PENCIL TIP HOLDER ASSEMBLY
REV DATE	08/8/2002
MACHINE MODELS	PXS-A/B



Basic knowledge of the operation of the lane machine

TOOLS NEEDED:

5/16 Allen Wrench

Clean Rags



TECHNICAL NOTE

Please thoroughly read the instructions prior to performing the installation of this assembly.

To avoid any potential problems, if at any time during the process you have a question, stop and contact our Tech Support department at the numbers listed below.

Please visit our growing library of videos to see if these instructions are available!



www.youtube.com/user/KegelBowling81




- Place orders with Distributor
- Maintenance reminders on phone
- Software updates
- How to videos

Take full control of your lane machine at My.kegel.net

Kegel's Lane Maintenance Central:
Within USA - 1-800-280-2695
Outside USA - +1 863-734-0200
via e-mail at LMC@Kegel.net
website www.kegel.net



1. Disconnect power from the machine. Lay machine down in the operating position.
2. Locate Oil Head assembly. Follow hose from assembly through floor plate to the bottom of the machine (this end will be inserted into a large spring). Remove this end of the hose from quick-disconnect fitting on floor plate. Use a rag to wipe up any oil that may drip from hose or fitting.
3. Slide hose out of spring, set spring aside for re-installation later.
4. Move back to Oil-Head assembly. Loosen the two set screws that hold the tip holder in place. Discard old tip holder assembly.
5. Slide new tip holder assembly into bracket. Use a ruler to adjust the distance from the tip to the transfer roller. This measurement should be **1/8"** to **3/16"**. Once you have the distance correct, tighten both set screws.
6. Place other end of hose back through spring and then down through the floor plate. Press hose back into quick connect fitting.
7. Run a few test lanes with machine to ensure proper operation.

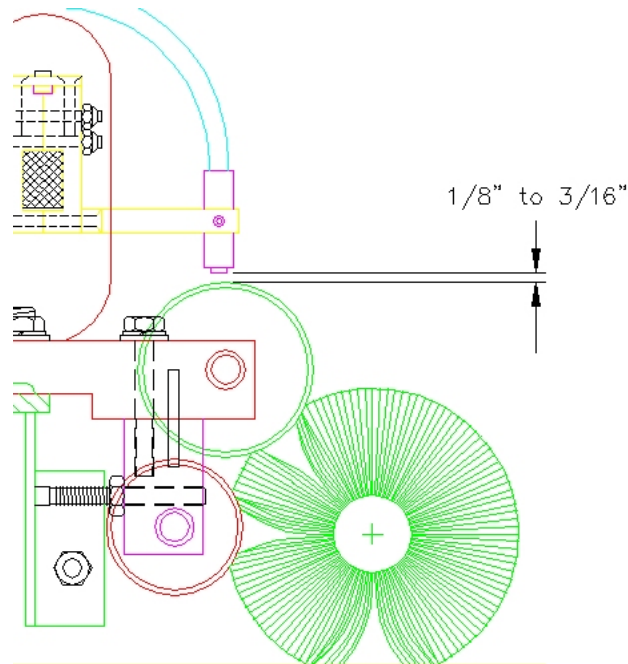

- Place orders with Distributor
- Maintenance reminders on phone
- Software updates
- How to videos

Take full control of your
lane machine at
My.kegel.net

Kegel's Lane Maintenance Central:
Within USA - 1-800-280-2695
Outside USA - +1 863-734-0200
 via e-mail at LMC@Kegel.net
 website www.kegel.net

