



Rev.02-12-2020

Adjustable Pin Wheel Brake Tension Bracket and Spring *part # **PPP-ABT***



Place spring into brake shoe corner hole and pull bracket hooks onto tubular frame support. Adjust tension as needed.



Rev. 02-12-2020

Adjustable Pin Wheel Brake Tension Bracket and Spring *part # **PPP-ABT***



Place spring into brake shoe corner hole and pull bracket hooks onto tubular frame support. Adjust tension as needed.



Rev. 02-12-2020

Adjustable Pin Wheel Brake Tension Bracket and Spring *part # **PPP-ABT***



Place spring into brake shoe corner hole and pull bracket hooks onto tubular frame support. Adjust tension as needed.

