



Rev. 03-10-2020

### 7 & 10 Deck Roller Spacers

part # **PPP-DRS** (pkg of 2)



Place shoulder bolt through bracket and deck roller.

Place 1 washer spacer onto shoulder bolt. Place urethane roller spacer onto shoulder bolt followed by 2<sup>nd</sup> washer spacer, then secure with Nylock. If needed, use 1 additional washer next to the bolt head.

Install completed deck roller assemblies with urethane spacer to the kickback side of the 7 and 10 deck roller positions.



Rev. 03-10-2020

### 7 & 10 Deck Roller Spacers

part # **PPP-DRS** (pkg of 2)



Place shoulder bolt through bracket and deck roller.

Place 1 washer spacer onto shoulder bolt. Place urethane roller spacer onto shoulder bolt followed by 2<sup>nd</sup> washer spacer, then secure with Nylock. If needed, use 1 additional washer next to the bolt head.


Install completed deck roller assemblies with urethane spacer to the kickback side of the 7 and 10 deck roller positions.



Rev. 03-10-2020

### 7 & 10 Deck Roller Spacers

part # **PPP-DRS** (pkg of 2)

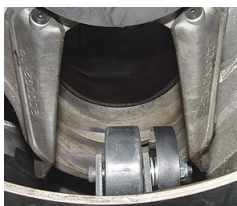

Place shoulder bolt through bracket and deck roller.

Place 1 washer spacer onto shoulder bolt. Place urethane roller spacer onto shoulder bolt followed by 2<sup>nd</sup> washer spacer, then secure with Nylock. If needed, use 1 additional washer next to the bolt head.

Install completed deck roller assemblies with urethane spacer to the kickback side of the 7 and 10 deck roller positions.

