




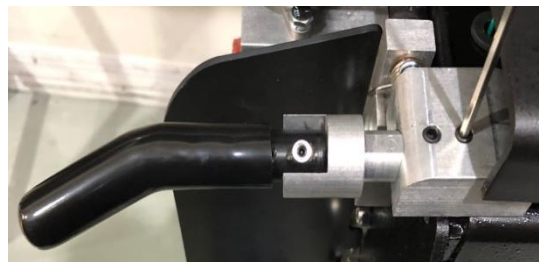
Installation Instructions

PART NUMBER	164-8825	
PART DESCRIPTION	RIGHT WHISKER ASSEMBLY	
REV DATE	4/9/20	
MACHINE MODELS	FLEX WALKER	

TOOLS NEEDED	PARTS
1/8" T-HANDLE OR ALLEN WRENCH RULER	(1) 164-8825 WHISKER ASSEMBLY
TECHNICAL NOTE	
Please thoroughly read the instructions prior to performing the installation of this assembly. To avoid any potential problems, if at any time during the process you have a question, stop, and contact our Tech Support department at the numbers listed below.	

STEPS

- 1) Stand the machine up in the transport position.
- 2) Loosen the (2) ¼-20 set screws in the top of the Whisker Mount Block.
- 3) Slide the old 164-8825 Right Whisker Assy out of the block.



- 4) Insert the replacement whisker assembly into the mount block until the end of the whisker tube is exactly 6-1/4" from the outside of the machine frame panel.
- 5) Tighten both set screws completely.



Within USA - 1-800-280-2695
Outside USA - +1 863-734-0200
www.kegel.net
E-Mail: tech@kegel.net

Rev. 9/20

