




# Installation Instructions

<b>PART NUMBER</b>	<b>164-8824</b>	
<b>PART DESCRIPTION</b>	<b>LEFT WHISKER ASSEMBLY</b>	
<b>REV DATE</b>	<b>4/10/20</b>	
<b>MACHINE MODELS</b>	<b>FLEX WALKER</b>	



<b>TOOLS NEEDED</b>	<b>PARTS</b>
1/8" T-HANDLE OR ALLEN WRENCH RULER	LEFT WHISKER ASSEMBLY

## TECHNICAL NOTE

Please thoroughly read the instructions prior to performing the installation of this assembly. To avoid any potential problems, if at any time during the process you have a question, stop, and contact our Tech Support department at the numbers listed below.

## STEPS

- 1) Stand the machine up in the transport position.
- 2) Loosen the (2) ¼-20 set screws in the top of the Whisker Mount Block.
- 3) Slide the Left Whisker Assembly out of the block.
- 4) Insert the replacement Whisker Assembly into the mount block until the end of the whisker tube is exactly 6-1/4" from the outside of the machine frame panel.
- 5) Tighten both set screws completely.
- 6) Put the machine on the lane and observe the Whisker Assemblies as the lane machine goes onto the lane.

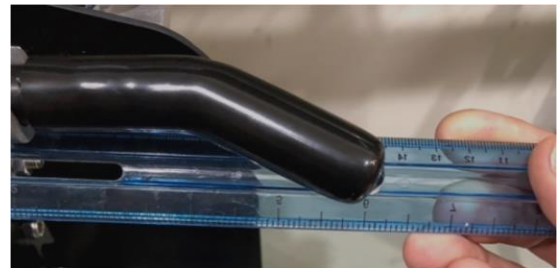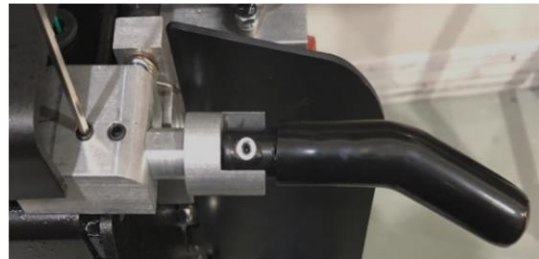

Within USA - 1-800-280-2695  
Outside USA - +1 863-734-0200  
www.kegel.net  
E-Mail: tech@kegel.net

Rev. 9/20

