



INSTALLATION INSTRUCTIONS


PART NUMBER	156-8310
PART DESCRIPTION	SPOT ON PIN DECK TREATMENT
REV DATE	9/8/2015
MACHINE MODELS	FLEX / FLEX WALKER

THE MAINTENANCE AND UPKEEP OF THIS PART OF THE MACHINE SHOULD ONLY BE PERFORMED BY THE MOST TRUSTED PLAYER ON THE TEAM!!!

DO NOT PERFORM MAINTENANCE TO THE PIN DECK TREATMENT WHILE ON THE APPROACH!


NEW MACHINE INSTALLATION

1. Cut the wire tie that is holding the pin deck treatment hose onto the holding lever.

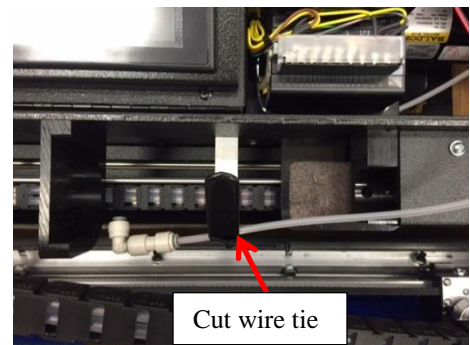

2. Remove the black cap from the new bottle.

3. There are two different types of white caps in the package. One is to be used to install the can inside of the lane machine. The other one is used to spray pin deck treatment manually onto the pin deck. See picture.

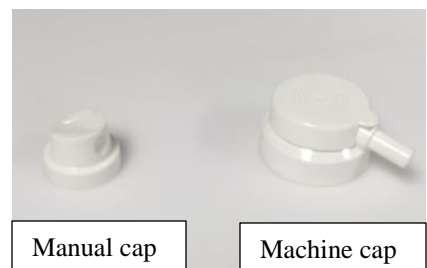

- Place orders with Distributor
- Maintenance reminders on phone
- Software updates
- How to videos

Take full control of your
lane machine at
My.kegel.net

Kegel's Lane Maintenance Central:
Within USA - 1-800-280-2695
Outside USA - +1 863-734-0200
 via e-mail at LMC@Kegel.net
 website www.kegel.net



4. Take the machine cap from the bag and press down firmly straight on to the top of the bottle.

5. To protect the inside for any potential spills, slide the lid so that it closes enough to cover the center compartment.

6. Pull back on the holding lever and place the bottle in place with the spray nozzle facing in the up position as shown to the right.



7. Attach the pin deck treatment hose assembly to the nozzle of the can by pressing firmly on the fitting as shown to the right.

8. Before placing the can into the machine, remove the protective cap after installing the actuator cap and press down to break the plastic on the actuator button.



9. After installing the can, you will need to prime the pin deck treatment line to insure proper flow during operation.

PRIMING THE LINE

1. To prime the line, you must first remove the tip and hose assembly from the head block located in the cleaning compartment. Then remove the black tip cover as shown.

PLEASE READ THE IMPORTANT INFORMATION LOCATED IN CHAPTER 3 OF THE OPERATORS MANUAL

2. Place the tip assembly into a cup or empty water bottle, and turn the pin deck treatment solenoid on through your Output feature located in the Menu. (refer to Section 6)

3. Press the output key continuously for pin deck treatment until you see a steady stream from the tip assembly.

4. Now that you have a steady stream, this function is ready to go. Replace the black tip cover immediately after priming if not being used.



- Place orders with Distributor
- Maintenance reminders on phone
- Software updates
- How to videos

Take full control of your
lane machine at
My.kegel.net

Kegel's Lane Maintenance Central:
Within USA - 1-800-280-2695
Outside USA - +1 863-734-0200
via e-mail at LMC@Kegel.net
website www.kegel.net




REPLACING BOTTLE

SPILLAGE CAN OCCUR!
THIS JOB SHOULD BE DONE ON THE SHOP FLOOR, OR DESIGNATED AREA

1. With the hose assembly still attached to the nozzle, pull holding lever back and lift the bottle up and out of the compartment.

2. Before removing cap and hose assembly, help free up the cap from the bottle by twisting the cap back and forth on the bottle as shown. (shown without hose attached)

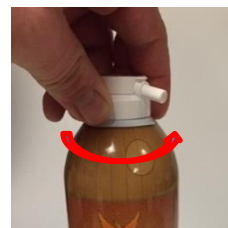

3. Remove the cap and hose assembly as one by pushing up on the assembly as shown to the right.



4. Place the cap and hose assembly on top of the new bottle and push firmly on the outside portion of the cap to attach it to the stem. Be careful to not press the center button during this process! You will have a sticky mess to clean up!

5. Now that the bottle has been properly installed, refer to the PRIMING THE LINE section of these instructions.

IF BUBBLES ARE PRESENT TOWARDS THE FITTING ON THE 'SPOT ON CAN', THIS IS AN INDICATION OF A PROBLEM THAT NEEDS CORRECTING PRIOR TO OPERATION. Its possible that the problem is in a defective can of Spot On, or the actuator itself needs to be removed and cleaned, or replaced. Do NOT operate the lane machine, or turn off this feature, prior to operation.

MANUAL APPLICATION

1. Take the manual cap (shown right) from the bag and press straight down firmly on to the top of the bottle.
2. Hold the can between the 1 pin spot and the 2-3 pin spots and point it towards the 7 pin spot. Quickly spray on a light mist going one time from the 7 to the 10 pin spots (the mist should cover the back two rows).
3. Replace the cap after use. Allow 10 minutes for Spot On to dry before using lane or setting pins.



- Place orders with Distributor
- Maintenance reminders on phone
- Software updates
- How to videos

Take full control of your
lane machine at
My.kegel.net

Kegel's Lane Maintenance Central:
Within USA - 1-800-280-2695
Outside USA - +1 863-734-0200
via e-mail at LMC@Kegel.net
website www.kegel.net

