



INSTALLATION INSTRUCTIONS

PART NUMBER	154-8876A
PART DESCRIPTION	CLEANER VALVE ASSY REPLACEMENT
REV DATE	4/6/2015
MACHINE MODELS	KUSTODIAN PLUS



Basic knowledge of the operation of the lane machine

TOOLS NEEDED:

Philip screwdriver

Wire Cutters



TECHNICAL NOTE

Please thoroughly read the instructions prior to performing the installation of this assembly.

To avoid any potential problems, if at any time during the process you have a question, stop and contact our Tech Support department at the numbers listed below.

Please visit our growing library of videos to see if these instructions are available!



www.youtube.com/user/KegelBowling81




- Place orders with Distributor
- Maintenance reminders on phone
- Software updates
- How to videos

Take full control of your lane machine at
My.kegel.net

Kegel's Lane Maintenance Central:
Within USA - 1-800-280-2695
Outside USA - +1 863-734-0200
via e-mail at LMC@Kegel.net
website www.kegel.net



1. Remove power from the machine.
2. Lay machine down in the operating position.
3. Remove recovery tank from the machine.
4. With a rag under the cleaner valve, remove the tubing from the 3 fittings on the existing cleaner valve assembly.
5. With a phillip screwdriver, remove the cleaner valve assembly from the mounting bracket. Be careful to catch the spacers for reassembly.

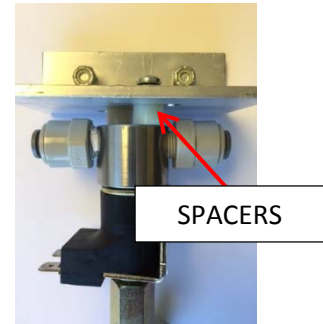

6. Using the spacers removed from the previous step, mount the new valve assembly with the sticker on the valve facing the side plate. Plug the cleaner valve assembly into the old plug.
7. The tubing that was going to the top two fittings on the old valve, will be used in the same place with the new fitting.



8. The tube going to the bottom of the valve will be removed from the lane machine. To do this, follow the tubing all the way back to the cleaner pump assembly. You will find at the cleaner pump it will go into a 'T' fitting. Remove this fitting and install the 90 degree elbow fitting from the kit onto the norprene tubing. The other end of the 90 degree elbow will go to the tubing the routes back to the top of the cleaner tank assembly.
9. You can now remove the remaining tubing from the lane machine.
10. Reinstall the recovery tank assembly.
11. You will now need to perform a few cleaner pump calibrations to verify the volume and that everything is working normal.



- Place orders with Distributor
- Maintenance reminders on phone
- Software updates
- How to videos

Take full control of your
lane machine at
My.kegel.net

Kegel's Lane Maintenance Central:
Within USA - 1-800-280-2695
Outside USA - +1 863-734-0200
 via e-mail at LMC@Kegel.net
 website www.kegel.net

