




Installation Instructions

PART NUMBER	164-8660A	
PART DESCRIPTION	2016 WHISKER SPRING ASSEMBLY	
REV DATE	11/16/2022	
MACHINE MODELS	KUSTODIAN WALKER	

TOOLS NEEDED	PARTS
1/8" Allen Wrench Ruler	164-8660A
TECHNICAL NOTE	
Please thoroughly read the instructions prior to performing the installation of this assembly. To avoid any potential problems, if at any time during the process you have a question, stop, and contact our Tech Support department at the numbers listed below.	

STEPS

REMOVING OLD WHISKER

1. Remove the vinyl cap from the shorter end.
2. Loosen the two set screws in top of the Whisker Spring Mount Block and remove the spring assembly from block.

INSTALLING NEW WHISKER


1. Slide the new whisker assembly into the mount block far enough so that a measurement of 6" is reached between the outside edge of the mount block and to the end of the long portion of the whisker.
2. Turn the whisker assembly down towards the approach until a 1/4" gap is reached and tighten the two set screws. Do this for both the left and right whisker assemblies.



Within USA - 1-800-280-2695
Outside USA - +1 863-734-0200
www.kegel.net
E-Mail: tech@kegel.net

Rev. 9/20



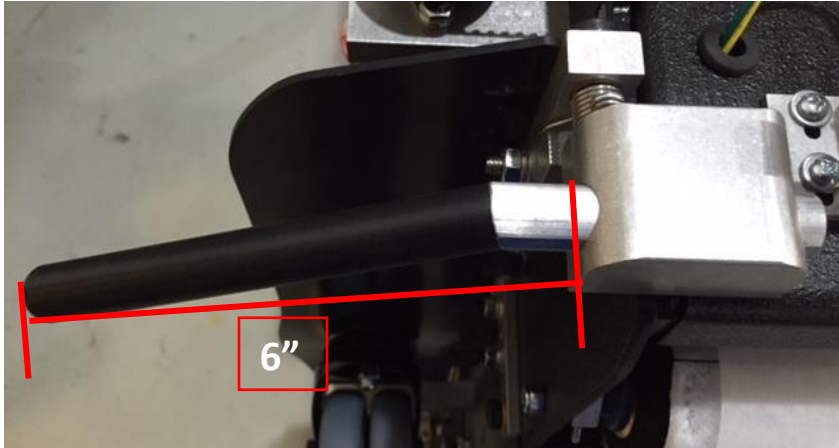

Setscrews